MAKE THE WORLD SEE

# **Milestone Systems**

XProtect® LPR 2024 R2

User manual



## Contents

Copyright, trademarks, and disclaimer	3
Adding LPR content to your views	1
Adding LPR content	1
Add LPR cameras to views	1
Adjust LPR view settings	1
Enable LPR server status on maps	1
Enable LPR-specific elements	5
Viewing LPR related content	7
License plate recognition	7
LPR in live mode	7
LPR on the Search tab	7
The LPR tab	7
LPR event list	7
License plate styles	3
Filtering LPR events	3
Edit match lists C	)
Import or export match lists	)
Export LPR events as a report	)
LPR on the Alarm Manager tab	1
View LPR recognitions	1

### Copyright, trademarks, and disclaimer

Copyright © 2024 Milestone Systems A/S

#### Trademarks

XProtect is a registered trademark of Milestone Systems A/S.

Microsoft and Windows are registered trademarks of Microsoft Corporation. App Store is a service mark of Apple Inc. Android is a trademark of Google Inc.

All other trademarks mentioned in this document are trademarks of their respective owners.

#### Disclaimer

This text is intended for general information purposes only, and due care has been taken in its preparation.

Any risk arising from the use of this information rests with the recipient, and nothing herein should be construed as constituting any kind of warranty.

Milestone Systems A/S reserves the right to make adjustments without prior notification.

All names of people and organizations used in the examples in this text are fictitious. Any resemblance to any actual organization or person, living or dead, is purely coincidental and unintended.

This product may make use of third-party software for which specific terms and conditions may apply. When that is the case, you can find more information in the file 3rd\_party\_software\_terms\_and\_conditions.txt located in your Milestone system installation folder.

## Adding LPR content to your views

### Adding LPR content

#### Add LPR cameras to views

- 1. In **Setup** mode, select the view you want to add an LPR camera to.
- 2. In the System overview pane, click LPR and drag it to the relevant view item.
- 3. In the **Select LPR camera** dialog box, expand the required server to view a list of available LPR cameras from that server.

You can specify how you want to display LPR camera events in live mode in the **Properties** pane (see Adjust LPR view settings on page 4).

#### Adjust LPR view settings

- 1. In live mode, click **Setup**.
- 2. In **Properties**, next to **LPR camera**, click the **Browse** button to open the **Select LPR camera** dialog box and select another LPR camera.
- 3. Choose the order of LPR events in your lists on the right-hand side of the preview:
  - Newest on top: Display the newest LPR events at the top of the list
  - Newest on bottom: Display the newest LPR events at the bottom of the list
- 4. If you want to display the list of license plates from one camera but want to view video from another, select a different camera in the **Camera name** field.

#### Enable LPR server status on maps

It is possible to visualize LPR servers on maps and have their current status shown on the maps. To enable the LPR server status on maps:

- 1. In live mode, click Setup.
- 2. In **Views**, select the relevant map.
- 3. Right-click the map and select **Toolbox**.
- 4. In the toolbox, click the Add plug-in element icon to open the Element selector window.
- 5. Select the relevant LPR server and drag it onto the map.
- 6. On the map, right-click the LPR server icon and select **Status details** to get live status on the LPR server and the LPR cameras related to the server.

You can associate the LPR specific map with your **Alarm list** by adding the map on the **Alarm Manager** tab.

#### **Enable LPR-specific elements**

To be able to see all relevant information regarding LPR recognitions in your XProtect Smart Client, on the **Alarm Manager** tab, do the following:

1. On the Alarm Manager tab, in the Alarms list, right-click the Image icon ext to the Quick Filters column. From the menu, select: Object, Tag, and Type.



2. Now **Type** displays all events related to LPR, **Tag** displays their country codes, and **Object** displays license plate numbers of the registered vehicles.

		-	8
	Traffic Count	0134/0163	
Traffic Count: 0140/0163	18:00 41 4	4 13-09-2012	08:28:44.000 🕨 🕨
Camera: Secondaria data data di Camera			Go to Alarm Time
Instructions.		Assigned to:	
		State:	1: New -
		Priority:	1-High ·
		Category:	
		ID:	90132
		Source:	Intelline intelline form.
		Alarm:	LICENCE
		Menne	the state license plate
Activities		Type:	LPR Event
The second		Rue.	Alert: Cention
Time Activity Own 06-28 Initial state: 1: New		Location	
15 12 Lines months 1 lines		Tag:	DK
		Vinda-	$\ge$
		Object:	EZ1202
	Add		
Help Print.			OK

## **Viewing LPR related content**

### License plate recognition

#### LPR in live mode

In live mode, you can view live video from the cameras that have been configured for license plate recognition (LPR). You can view video from several LPR cameras in a view at the same time. On the right-hand side of the view item, the LPR events appear whenever there is a match. In setup mode, you can change the settings that define how the list of license plate numbers displays.

When you click a license plate in the LPR event list, the live video automatically pauses and changes to independent playback. To go back to viewing live video, either click the license plate again or click the **Independent playback** icon on the camera toolbar.

#### LPR on the Search tab

On the **Search** tab, you can search for video recordings associated with vehicles.

#### The LPR tab

On the LPR tab, you can investigate LPR events from all your LPR cameras and view the associated video recordings and license plate recognition data. Keep match lists updated and create reports.

The tab includes an LPR event list and an LPR camera preview. In the preview, you can view video associated with LPR event details. Below the preview, information about the license plate appears together with details from the match list and the license plate style that it is associated with.

You can filter the event list according to the period, country module, LPR camera, match list, or license plate style. Use the **Search registration number** field to search for a particular license plate registration number. By default, this list shows LPR events from the last hour.

You can specify and export a report of relevant events as PDF.

You can make updates to the existing match lists by using the Match list function.

#### LPR event list

The LPR event list displays all LPR events. By default, the list displays LPR events from the last hour and with the newest at the top, but your system administrator can change this.

When you select an LPR event from the list, you can see a preview to the right with the related video sequence for the event. The title bar of the preview shows the name of the LPR camera that the LPR event was triggered from. You also see the:

- License plate number
- Country module
- Time of the event
- Match list that triggered the event
- License plate style (see License plate styles on page 8)

You can change how the LPR event list displays events; you can sort the columns and you can drag them to different positions. You can use the filters at the top of the list to filter LPR events or use the **Search registration number** field to search.



The LPR event list only displays LPR events from the time of your search or filter. If you want to see the latest LPR events, click the **Refresh** button.

#### License plate styles

A license plate style is a set of characteristics of a license plate, including the:

- Plate size and shape
- Text format and font
- Colors
- Type of vehicle that the license plate is used on

Your system administrator can group license plate styles and give that group a custom name.



You can only add those license plate styles to match lists that were grouped and named by your system administrator.

#### **Filtering LPR events**

There are several ways you can filter the LPR event list, so it displays just the LPR events that you are interested in; you can click any of the filters at the top of the list to see only LPR events associated with that filter. Any filters you apply are immediately reflected in the list.

- Period: Select one of the available periods to see LPR events within that particular time
- **Country module**: Clear or select country modules to view only LPR events linked to a license plate from a particular country, state, or region
- LPR camera: Select one or more of the available LPR cameras to view only LPR events for those cameras

- Match list: Select one or more license plate lists to view only LPR events generated by those lists
- License plate style: Select one or more license plate styles to view only LPR events associated with those license plate styles

You can combine the filters, for example, for a particular country module on a certain date.

You can also use the **Search registration number** field to search for a particular license plate. Enter a combination of characters to find results with combinations of those characters. For example, if you enter the characters **XY 12** you will get license plates that have both XY and 12 in their number. If you enter **XY12** you will only get license plates that have XY12 in their number.

#### **Edit match lists**

You can add and delete license plates from match lists.

- 1. On the LPR tab, in the top-right corner of the window, click Match lists to open the Match lists dialog box.
- 2. In Select match list, select the list that you want to edit.
- 3. To add a license plate registration number or a license plate style, click Add. Enter relevant information and click OK.



You can only add those license plate styles to match lists that were grouped and named by your system administrator.

- 4. To edit an existing license plate registration number, you can use the search function to find the relevant registration number.
- 5. Double-click a single row to edit or select multiple rows and click Edit.
- 6. In the dialog box, enter information and click **OK**. If the match list contains muliple columns, you can edit the information in all fields.
- 7. To remove a license plate registration number, you can use the search function to find the relevant registration number.
- 8. Select multiple rows if needed and click Delete.
- 9. Click Close.

Alternatively, you can add a license plate to a match list by right-clicking an unlisted LPR event and selecting **Add to list**. You can also remove a license plate by selecting the relevant LPR event, and on the right, below the preview, clicking the **Remove from list** icon.

#### Import or export match lists

You can import a file with a list of license plates that you want to use in a match list. You have the following import options:

- Add license plates to the existing list
- Replace the existing list

This is useful if, for example, the lists are managed from a central location. Then they can keep all local installations updated by distributing a file.

Similarly you can export the complete list of license plates from a match list to an external location.

- 1. To import a match list:
  - 1. On the LPR tab, at the top right of the window, click Match Lists to open the Match Lists dialog box.
  - 2. Select the relevant list.
  - 3. To import a file, click **Import**.
  - 4. In the dialog box, specify the location of the import file and the import type. Click Next.
  - 5. Await the confirmation and click **Close**.
- 2. To export a match list:
  - 1. Click Export.
  - 2. In the dialog box, specify the location of the export file and click **Next**.
  - 3. Click Close.
  - 4. You can open and edit the exported file in, for example, Microsoft Excel.

Supported formats are .txt or .csv.

#### Export LPR events as a report

You can export a report of LPR events to a PDF file.

1. On the LPR tab, filter or search for the events you want to include in the report.

If the number of found events is very high, you will receive a recommendation to refine the search and thereby reduce the number of search results.

2. Click the LPR Report button.

- 3. Specify the following values and click **OK**:
  - Report name
  - Report destination
  - A comment field
  - An option to include snapshots

A progress bar appears at the top right of the XProtect Smart Client window.

4. Click **Details** to view the report.



If you want to change the paper format or font, open the **Settings** window, select **Advanced**, and change the **PDF report format** or **PDF report font** settings.

#### LPR on the Alarm Manager tab

On the **Alarm Manager** tab, you can view and investigate alarms related to LPR. Some customization is required before you can view the information:

- Enable LPR-specific elements on page 5
- Alarms list must be in Event mode (see View LPR recognitions on page 11)

In general, read the sections about alarm management for more details on XProtect Smart Client functionality.

#### **View LPR recognitions**

You can view LPR recognitions in the alarm list. If you select events as the data source, all recognitions are displayed. If you select alarms as the data source, only the recognitions associated with an alarm are displayed.

#### Requirements

To use the **Type** field referred to in the steps below, the field must be enabled in XProtect Management Client by your system administrator.

Steps:

- 1. Go to the Alarm Manager tab.
- 2. Click the Setup button to enter setup mode.
- 3. To view recognitions associated with an alarm:
  - 1. In the Data Source list, select Alarm.
  - 2. Select **Setup** again to exit setup mode and save your changes. The recognitions are displayed in the alarm list.
  - 3. To view incoming LPR alarms, enter LPR in the Type field.

Alarms Custom (filter applied) ^ Clear fi	filter		1	Reports	1-4
Priority level:	Source:	Message:	From:		5710-2016 <b>113</b>
State level: 4	D:	Exclude closed alarms 🗸	To:		5-10-2016
State name:	Jwner:		Servers:	$\checkmark$	DKTA-1017CL0026
T	ype: LPR				

4. To view all recognitions:

Ì

- 1. In the Data Source list, select Event.
- 2. Select **Setup** again to exit setup mode and save your changes. The recognitions are displayed in the alarm list.
- 3. To view all incoming LPR events, enter LPR in the Type field.

The alarm list will display the filtered results only when you leave the field you modified.



### helpfeedback@milestone.dk

#### About Milestone

Milestone Systems is a leading provider of open platform video management software; technology that helps the world see how to ensure safety, protect assets and increase business efficiency. Milestone Systems enables an open platform community that drives collaboration and innovation in the development and use of network video technology, with reliable and scalable solutions that are proven in more than 150,000 sites worldwide. Founded in 1998, Milestone Systems is a stand-alone company in the Canon Group. For more information, visit https://www.milestonesys.com/.

